

Centrometal d.o.o. - Glavna 12, 40306 Macinec, Croatia, tel: +385 40 372 600, fax: +385 40 372 61 1



## **Technical instructions**

connecting and using of CM WiFi-Box for internet supervision and management of boiler work. (for boilers PelTec / PelTec-lambda)



TUCMWB-7-2017-ENG-VER 2 82k - WiFi- 1.08

(for boilers PelTec/PelTec-lambda)

# PART 1

WIFI BOX INSTALLATION INSTRUCTIONS

#### 1.0 DELIVERY CONTENT




UTP cable 1X




### 2.0 CONNECTING CM WiFi BOX TO THE BOILER

# A) Option 1 - directly from boiler CM WiFi-box CONNECT TO NEXT ADDITIONAL EQUIPMENT (If exist)

## B) Option 2 - from additional equipment

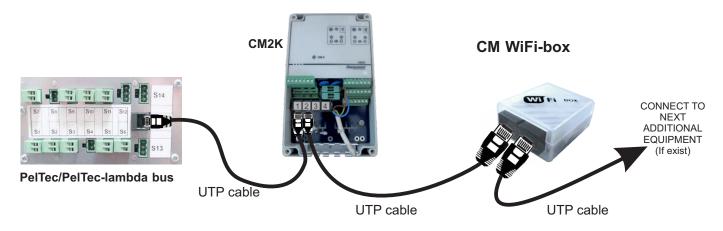


When CM WiFi-box is successfully connected by UTP CABLE, a new widget appears on the main screen showing the connection of internet supervision.

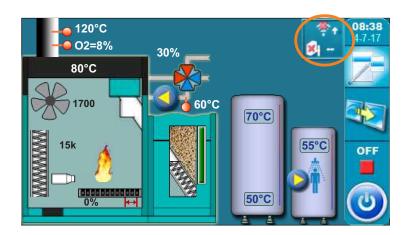

#### 3.0 CONNECTING TO HOME WIFI NETWORK

When the module is connected to the boiler, a new option "Internet supervision" appears in tab 5. "Operation".



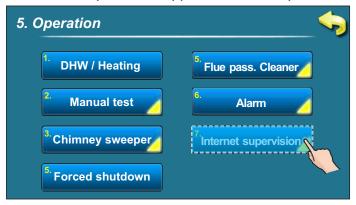

#### 1. Make sure internet supervision is turned on



Supervision

OFF
Supervision

Sup.+control

**Factory:** Supervision + control OFF, Supervision, Supervision + control

This option is used to enabling/disabling intertnet supervision and internet management of boiler work.

OR

#### 2. Insert WiFi AP (Name of your wifi home network)






Type name of your home wireless network. The name field is case sensitive. Use your computer or mobile phone to search for WiFi network and see the exact name of your home WiFi network.




#### 3. Insert WiFi key (home network password)

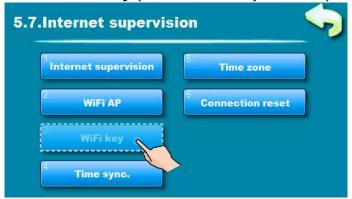



When you type a password, press the confirmation button and exit to the main screen. If you see green text "CON" on the main screen, it means that regulation is successfully connected with home WiFi network and boiler successfully communicates with the web server.

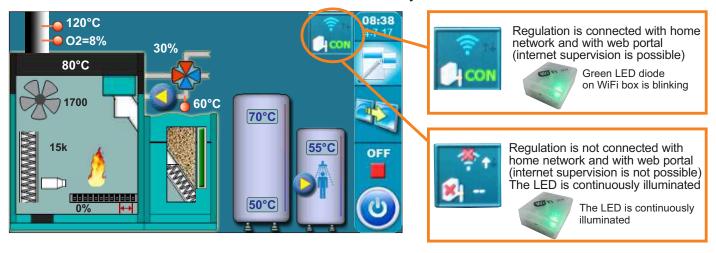



CM WiFi-box requires active DHCP server of Access Point (e.g. router) because manual setting of network parameters <u>is not possible</u>. For more informations contact administrator of your home network.

#### 4. Find WiFi ID on regulation "INFO" tab. WRITE "WIFI ID" ON THE PAPER AND KEEP IT!





If the CM WiFi-box was able to connect to the web portal at least once, in the tab "INFO" appears time of first connection. If you see the time of first connection then you can go to the web portal (see part 2 of this technical instructions).


OK

# PART 2


REGISTRATION AND USE OF THE WEB PORTAL

#### 4.0 REGISTRATION ON WEB PORTAL

1. Go to the web browser, type www.portal.centrometal.hr and click on "create new ccount".

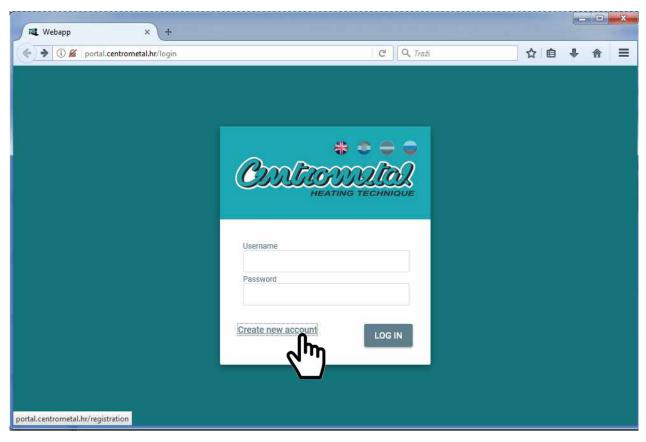



2. A new window will appear. You should enter WiFi ID. You can find WiFi ID in boiler regulation under "7. INFO". Enter WiFi ID and click "SEND".

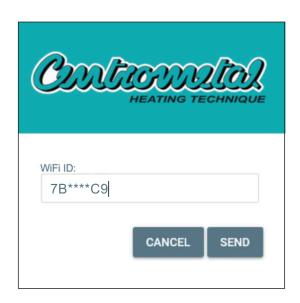




3. A new window will appear. Enter all required information and click "Register".

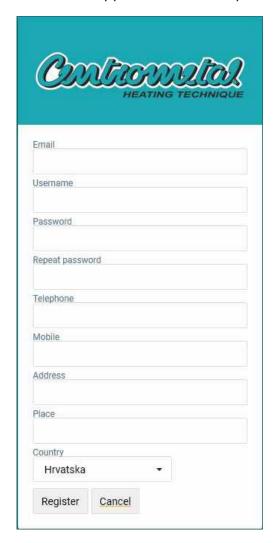

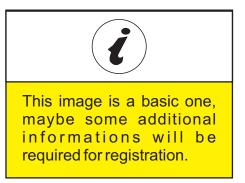

If everything is correct, the display of your boiler regulation will appear on the portal. You can now start using internet supervision.



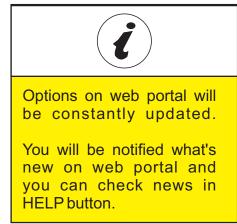

5.0 LOGIN





Centrometal d.o.o. assumes no responsibility for possible inaccuracies in this book originated typographical errors or rewriting, all the pictures and diagrams are principal and it is necessary to adjust each actual situation on the field, in any case the company reserves the right to enter their own products such modifications as considered necessary.

#### Centrometal d.o.o. Glavna 12, 40306 Macinec, Croatia

central tel: +385 40 372 600, fax: +385 40 372 611 service tel: +385 40 372 622, fax: +385 40 372 621

www.centrometal.hr e-mail: servis@centrometal.hr

